

# SOLSTICE

## MINI SOLSTICE SOLO LED LIGHT

Installation Instructions & User's Manual







## **VISION X**





# About The Mini Solstice Solo LED Light:

## **FEATURES**

- 1. Ultra Compact Housing
- 2. Less than 1 Amp Power Consumption
- 3. Omni-Link Interlocking System

### **SOLSTICE SOLO SERIES SPECIFICATIONS**

1. Warranty : Extended

2. Amp Draw : 0.42A @ 12V DC

Input Voltage : 9-32V DC
Beam Patterns : 10°, 40°, 60°
LED Lifespan : 50,000 Hours

## **PREPARATION**

- 1. We recommend completely reading instructions before installing.
- Consult your local state regulatory agency regarding the use of LED lighting.
- 3. The placement of LED lighting should not restrict airflow to the radiator, or block head lamps, turn signals, or parking lights.

## MINI SOLSTICE SOLO




WARNING: Bolts, Nuts, and Washers are Stainless Steel. <u>DO NOT USE</u> Pneumatic or Electric Tools to Tighten and Loosen. The <u>Hardware Will Permanently Lock Together</u>.

#### MOUNTING INSTALLATION INSTRUCTION

- First, attach Solo Mount to Light using provided Set Bolt(B1) and Allen Key(A1).
- 2. Next, place the light on the location where it will be mounted.
- 3. Determine where the Solo Mount bolt will be placed, and mark where the bolt location will be.
- 4. Drill a hole for the Solo Mount bolt.
- 5. Place the light over the hole, and then slide the bolt through the drilled hole.
- 6. Slide the Nylock Nut on the opposite side of the drilled hole, and fasten until properly secure.

## **MOUNTING KEY**

- 1. Solo Mount
- 2. Bolt
- 3. Mounting Surface
- 4. Nylock Nut 5mm

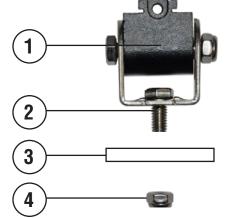

## **OMNI-LINK INSTRUCTIONS (OPTIONAL)**

- 1. Using the provided Omni Link (O1), slide the link into desired notch on the light.
- 2. Set in place using provided Set Bolt (B1) and Allen Key (A1).
- 3. Repeat using second light to link both lights together.




TIP: For complete application guide see website



## WIRING INSTALLATION INSTRUCTION

- 1. Supplied with the Mini Solstice Solo is a 3" Pigtail Part (P1).
- 2. Connect the positive (red) Pigtail wire to the positive wire of your power source. Repeat this step for the negative Pigtail wire (black) as well.
- Now that power is connected to the pigtail it is ready to plug into the LED light for use.

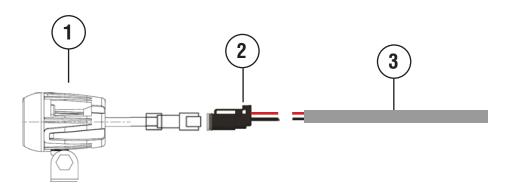

## **COMPONENTS KEY**

- 1. LED Light
- 2. Pigtail
- 3. Wire to Power Source

## **MAINTENANCE**

All Vision X models have been designed for maintenance free use. In the case an LED lamp or other part replacement is needed please contact your authorized service center.

