




INSTALL TIME: 15 mins

## 1 THREAD STRAP

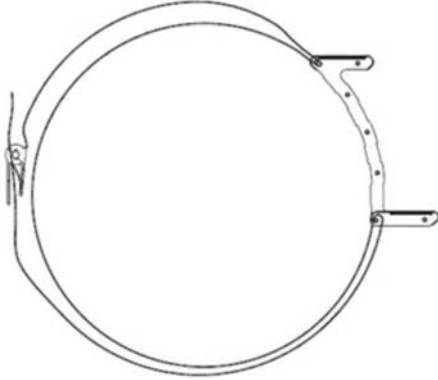


**Note:** This product will only fit wheels with a diameter of 600-830mm (24-32 Inches).

Feed the non- ratchet end of the tie down strap over and around the top pin found at the back of the wheel step.

Repeat for the bottom pin as seen in image.

## 2 MOUNT STEPS

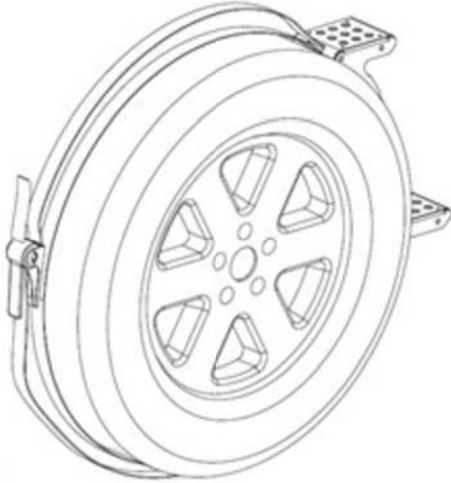

Place the steps over spare wheel and thread the end of strap through ratchet.

**WARNING:** Before fastening the strap, carefully open and close the vehicle's rear doors to ensure the wheel steps do not come into contact with the vehicle's body causing possible damage. If contact or interference occurs, refit the wheel step to opposite side of spare wheel.

Once happy with the positioning of the wheel steps, tighten strap using ratchet ensuring that the strap and steps are tight enough to support body weight.

### IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER RACKS AND ACCESSORIES BE PROPERLY AND SECURELY ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH TO YOU OR TO OTHERS. YOU ARE RESPONSIBLE FOR SECURING THE RACKS AND ACCESSORIES TO YOUR CAR, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR, AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER SUCH AS A QUALIFIED GARAGE OR AUTO BODY SHOP.